


## BEQUEME HÖHEN COMFORTABLE HEIGHTS

Winkel, Abstände, Greifnähe – das lässt sich ja heute alles wissenschaftlich berechnen. Unsere Praxisnähe kommt aus jahrzehntelanger Erfahrung. Was wie weit von wo entfernt sein sollte, weiß man bei ALNO, z. B. die richtige Arbeitshöhe: Sie stellen sich vor die Arbeitsplatte und winkeln die Arme etwas mehr als rechtwinkelig an. Nun sollte zwischen Händen und Platte noch ca. 10 bis 15 cm Freiraum sein. So ist die optimale Bewegungsfreiheit für Arbeiten aller Art gewährleistet und jeder Handgriff sitzt.

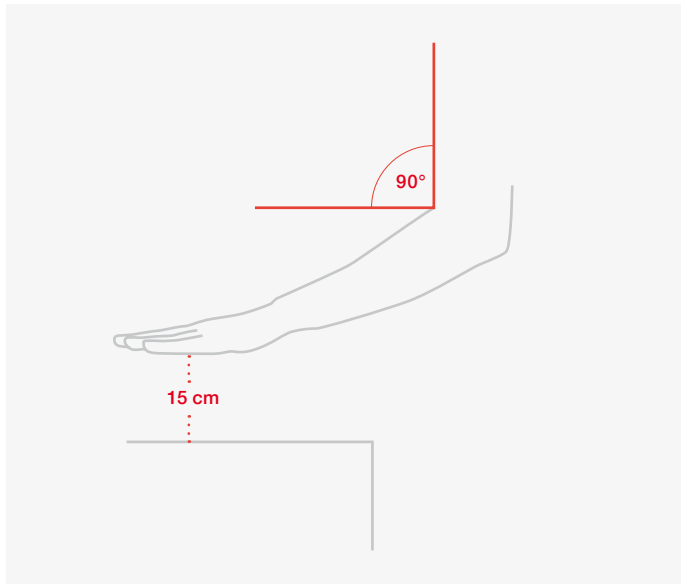

Angles, distances, easy reaching distances – all these things can be scientifically calculated today. Our knowledge of actual practice is the result of decades of experience. ALNO knows what should be how far away from where (e.g., the right working height). Stand in front of the counter and bend your arms a little more than at a right angle. There should now be approximately 10 to 15 cm of space between your hands and the counter. That is the optimal amount of freedom of movement that is needed for work of all kinds. Every movement is perfect.

